Installation Instructions

WOMO lighting

Model number: WM2204-9


Warning:
This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications.
This product is suitable for indoor installation.



Product style diagram


Steps of installation

1

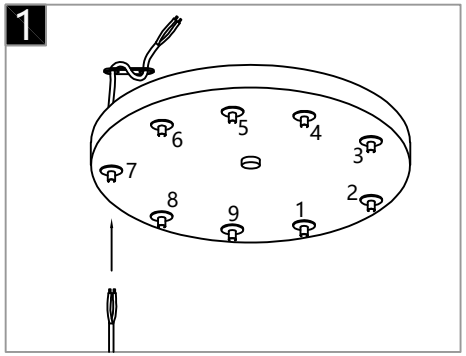


Separate the hanging wires on the lamp head by their lengths, install them from the bottom to the top cover, and then pass the hanging wires through the eight-leaf buckle and secure them on the top cover.

2

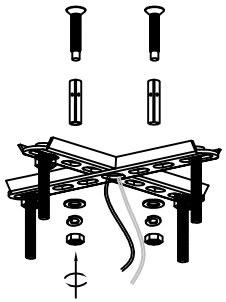


First, fix the expansion screws onto the ceiling, and then lock the mounting plate onto the screws.

3

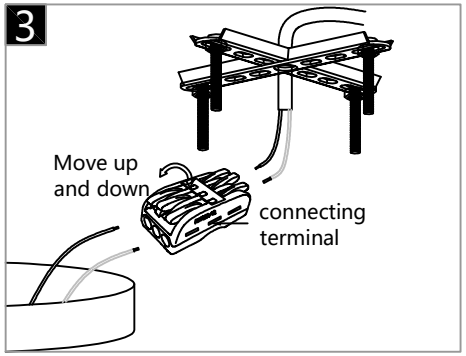


Connect the wires inside the luminaire and ceiling to the terminal, usually neutral wire (white), hot wire (black)


4

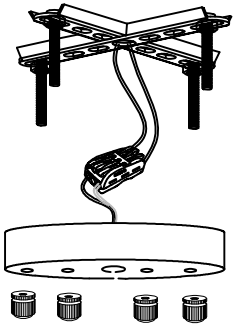

Align the top cover hole position on the luminaire with the screws on the mounting plate and then secure from the bottom using the nut.

Lamp cap suspension wire installation diagram:
The shortest one is 1, and the longest one is 9.

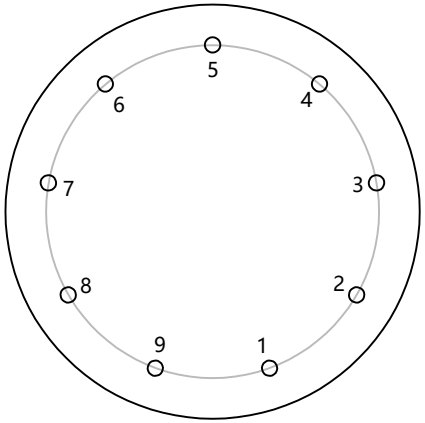

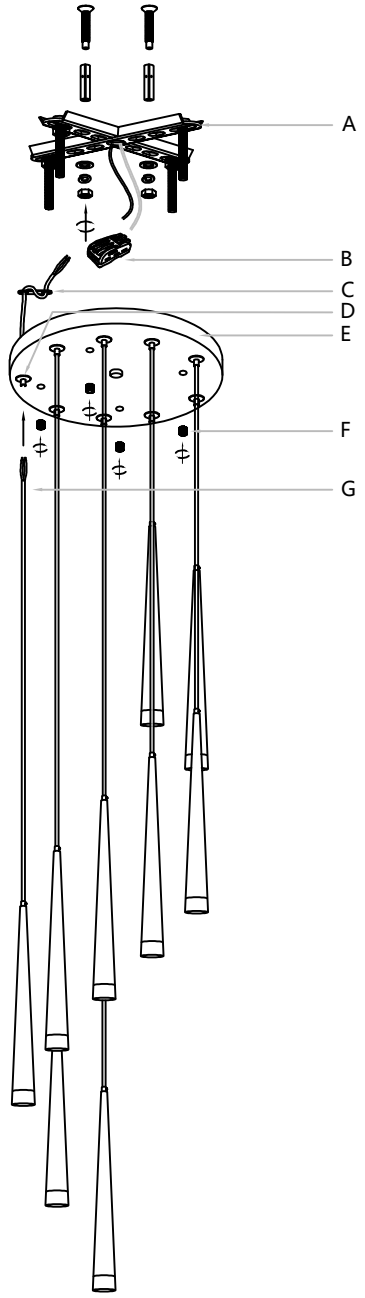


First, pass the wire (**G**) through the telescopic head (**D**). Then, pass each through the figure-eight buckle (**C**) for fixation. Next, fix the mounting plate (**A**) to the ceiling and connect the wire of the top cover (**E**) to the wire on the ceiling to the terminal block (**B**). Then, align the holes on the top cover (**E**) with the threaded rod on the mounting plate (**A**), and tighten the screws.

Installation Instructions

WOMO lighting

Model number: WM2204-12


Warning:
This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications.
This product is suitable for indoor installation.

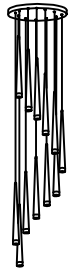

Product style diagram


Steps of installation

1

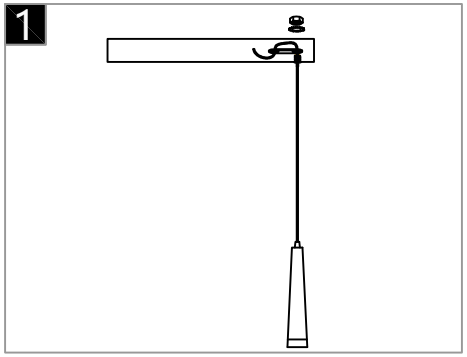


Separate the hanging wires on the lamp head by their lengths, install them from the bottom to the top cover, and then pass the hanging wires through the eight-leaf buckle and secure them on the top cover.

2

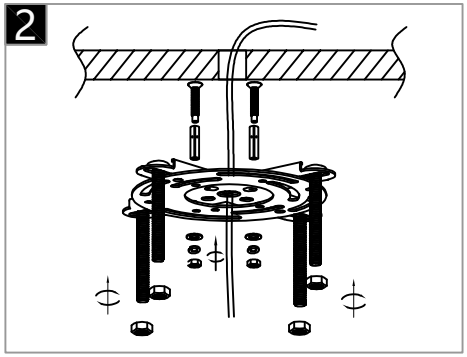


First, fix the expansion screws onto the ceiling, and then lock the mounting plate onto the screws.

3

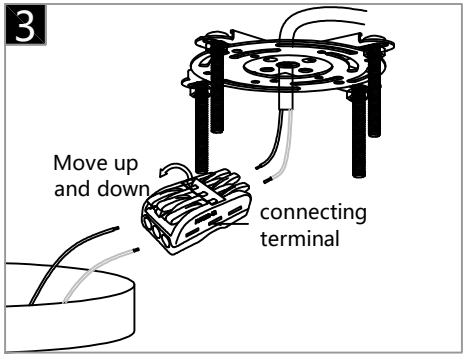


Connect the wires inside the luminaire and ceiling to the terminal, usually neutral wire (white), hot wire (black)


4

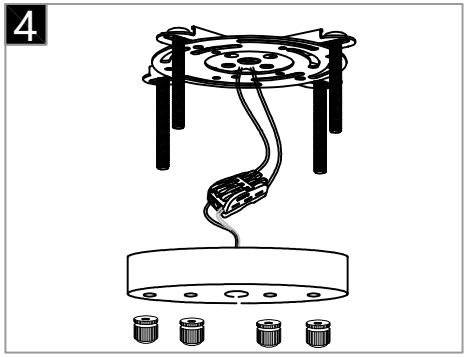

Align the top cover hole position on the luminaire with the screws on the mounting plate and then secure from the bottom using the nut.

Lamp cap suspension wire installation diagram:
The shortest one is 1, and the longest one is 12.

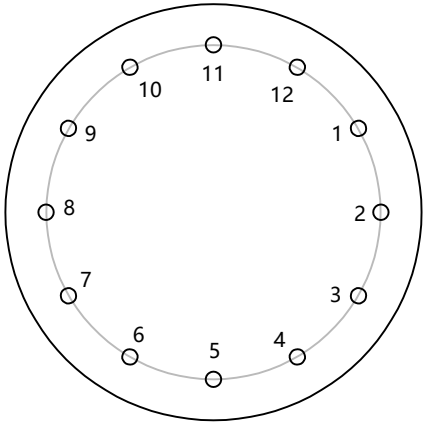

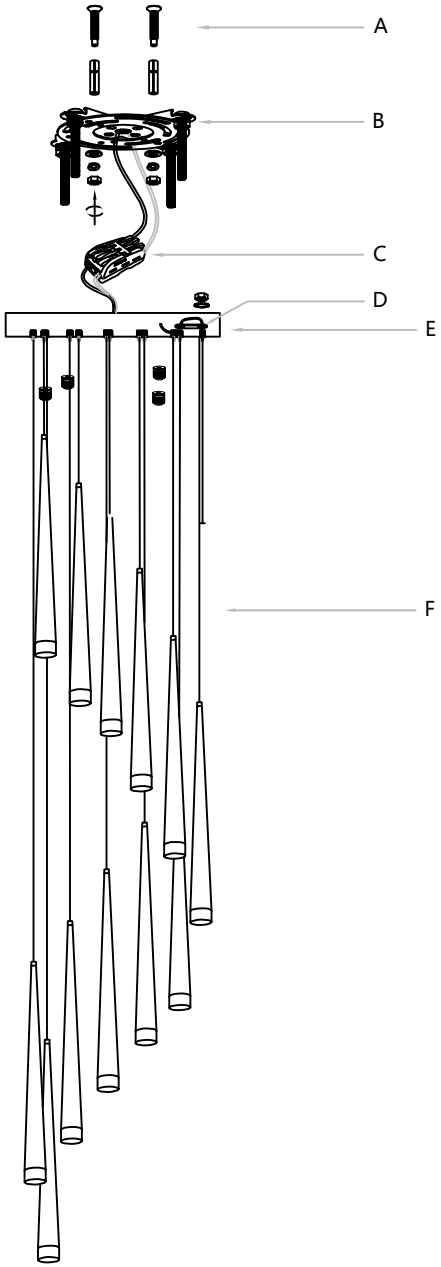

First, install the lamp head suspension wire (**F**) from the inside out onto the top cover (**E**). Then, use the eight-peg fastener (**D**) to secure the suspension wire and tighten the screws. Next, fix the mounting plate (**A**) to the ceiling, and connect the wires of the top cover (**E**) to the wires on the ceiling and the terminal plate (**B**). Then, align the holes on the top cover (**E**) with the holes on the mounting plate (**A**), and tighten the screws.

Installation Instructions

WOMO lighting Model number: WM2204-16


Warning:
This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications.
This product is suitable for indoor installation.



Product style diagram


Steps of installation

1

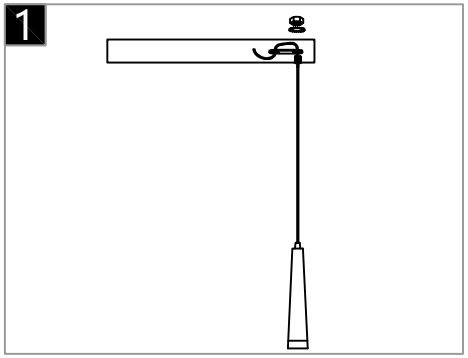


Separate the hanging wires on the lamp head by their lengths, install them from the bottom to the top cover, and then pass the hanging wires through the eight-leaf buckle and secure them on the top cover.

2

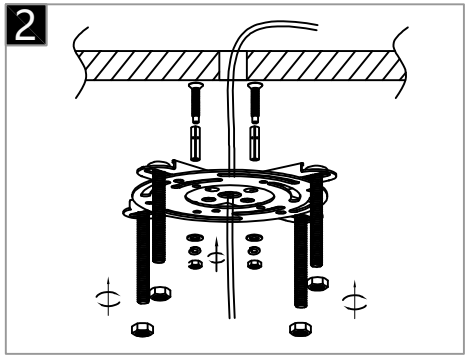


First, fix the expansion screws onto the ceiling, and then lock the mounting plate onto the screws.

3

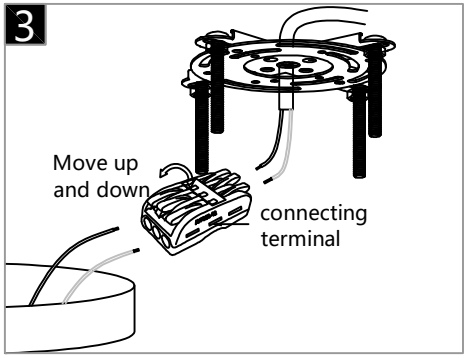


Connect the wires inside the luminaire and ceiling to the terminal, usually neutral wire (white), hot wire (black)


4

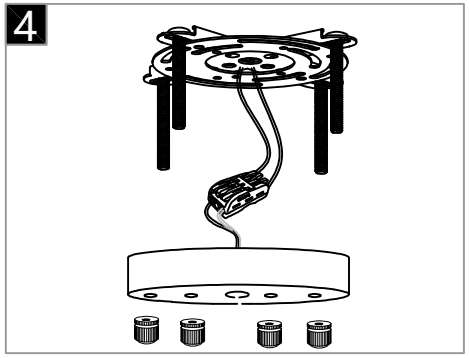

Align the top cover hole position on the luminaire with the screws on the mounting plate and then secure from the bottom using the nut.

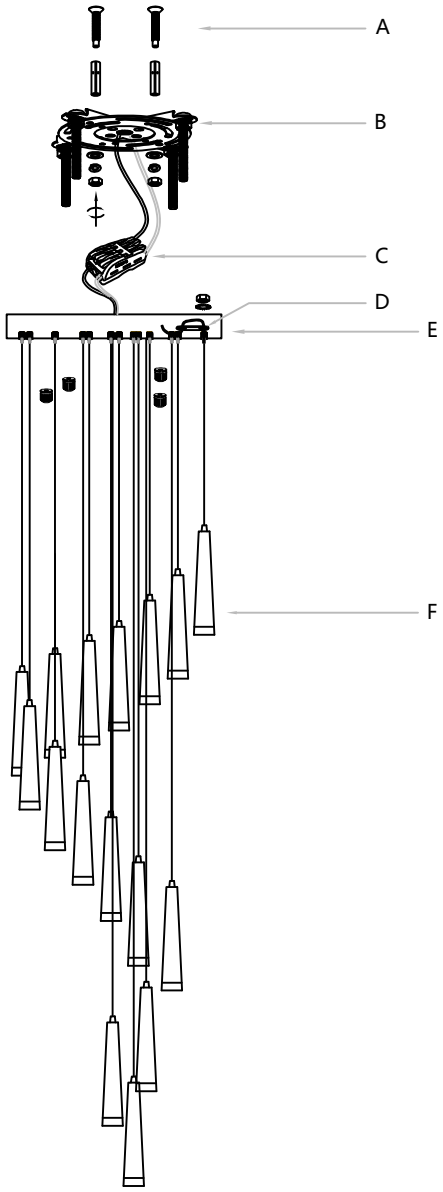

Lamp cap suspension wire installation diagram:
The shortest one is 1, and the longest one is 16.
When installing, start with the longest one (16).

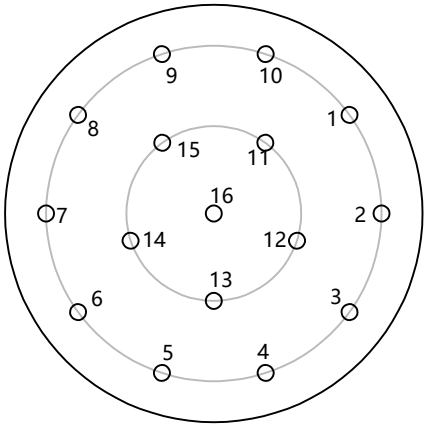

First, install the lamp head suspension wire (**F**) from the inside out onto the top cover (**E**). Then, use the eight-peg fastener (**D**) to secure the suspension wire and tighten the screws. Next, fix the mounting plate (**A**) to the ceiling, and connect the wires of the top cover (**E**) to the wires on the ceiling and the terminal plate (**B**). Then, align the holes on the top cover (**E**) with the holes on the mounting plate (**A**), and tighten the screws.

Installation Instructions

WOMO lighting

Model number: WM2204-16


Warning:
This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications.
This product is suitable for indoor installation.



Product style diagram


Steps of installation

1

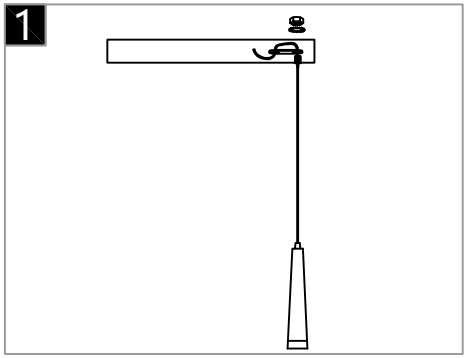


Separate the hanging wires on the lamp head by their lengths, install them from the bottom to the top cover, and then pass the hanging wires through the eight-leaf buckle and secure them on the top cover.

2

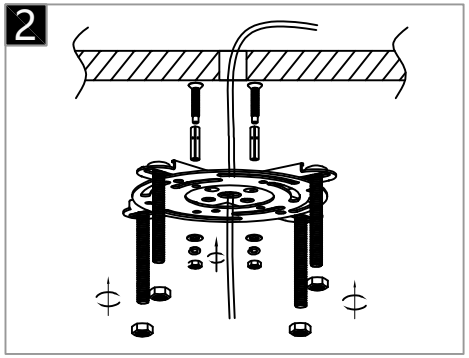


First, fix the expansion screws onto the ceiling, and then lock the mounting plate onto the screws.

3

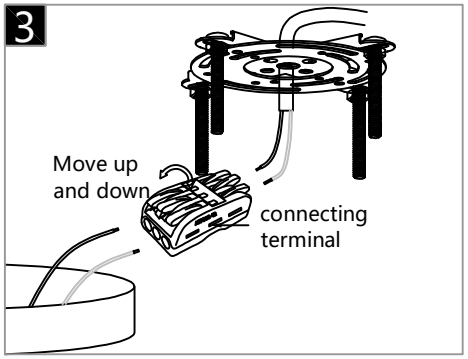


Connect the wires inside the luminaire and ceiling to the terminal, usually neutral wire (white), hot wire (black)


4

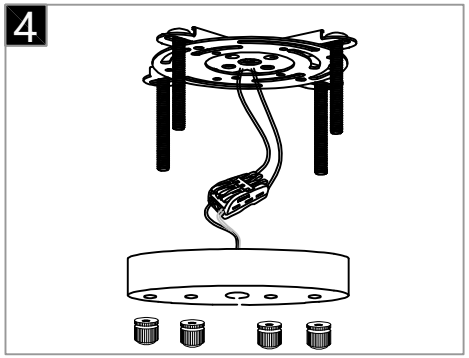

Align the top cover hole position on the luminaire with the screws on the mounting plate and then secure from the bottom using the nut.

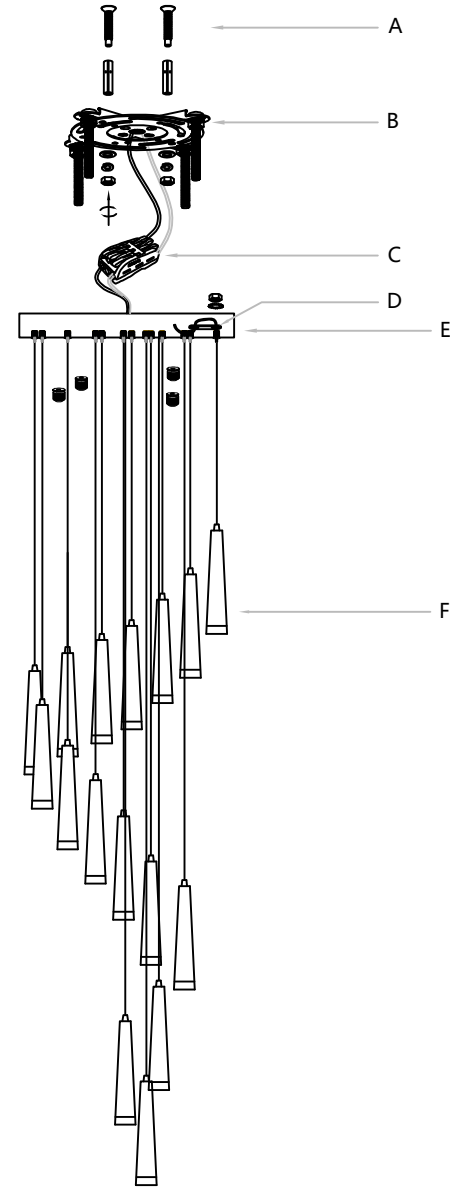

Lampshade suspension wire installation diagram: The shortest one is 1, and the longest one is 16. During installation, start from No. 1 and install them in sequence at intervals.

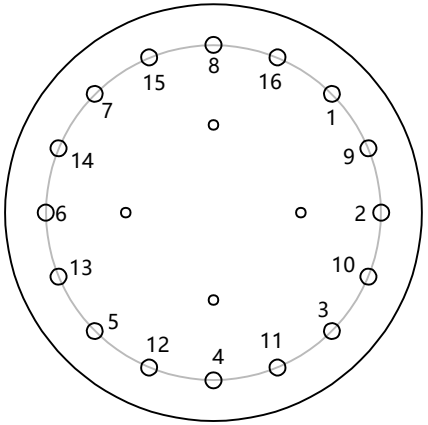

First, install the lamp head suspension wire (**F**) from the inside out onto the top cover (**E**). Then, use the eight-peg fastener (**D**) to secure the suspension wire and tighten the screws. Next, fix the mounting plate (**A**) to the ceiling, and connect the wires of the top cover (**E**) to the wires on the ceiling and the terminal plate (**B**). Then, align the holes on the top cover (**E**) with the holes on the mounting plate (**A**), and tighten the screws.

Installation Instructions

WOMO lighting

Model number: WM2204-25


Warning:
This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications.
This product is suitable for indoor installation.



Product style diagram


Steps of installation

1

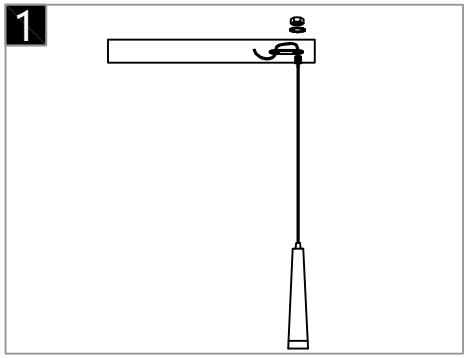


Separate the hanging wires on the lamp head by their lengths, install them from the bottom to the top cover, and then pass the hanging wires through the eight-leaf buckle and secure them on the top cover.

2

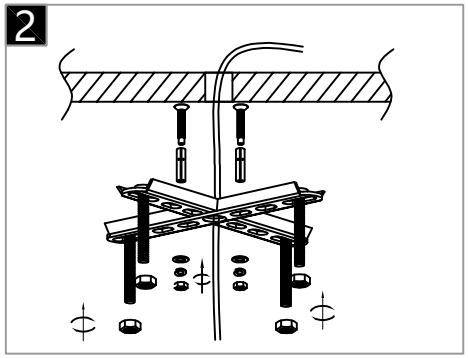


First, fix the expansion screws onto the ceiling, and then lock the mounting plate onto the screws.

3

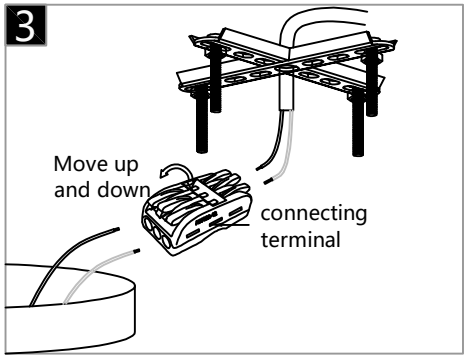


Connect the wires inside the luminaire and ceiling to the terminal, usually neutral wire (white), hot wire (black)


4

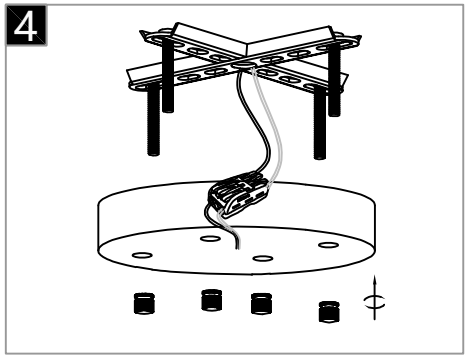

Align the top cover hole position on the luminaire with the screws on the mounting plate and then secure from the bottom using the nut.

Lampshade suspension wire installation diagram: The shortest one is 1, and the longest one is 25. During installation, start from No. 1 and install them in sequence at intervals.

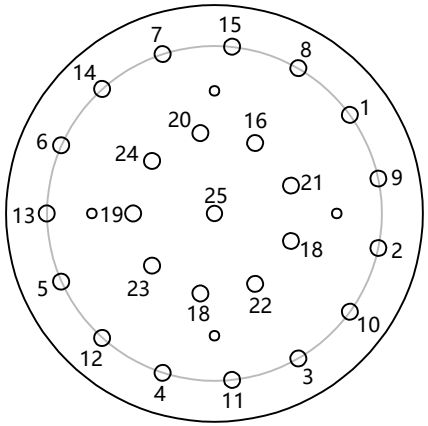

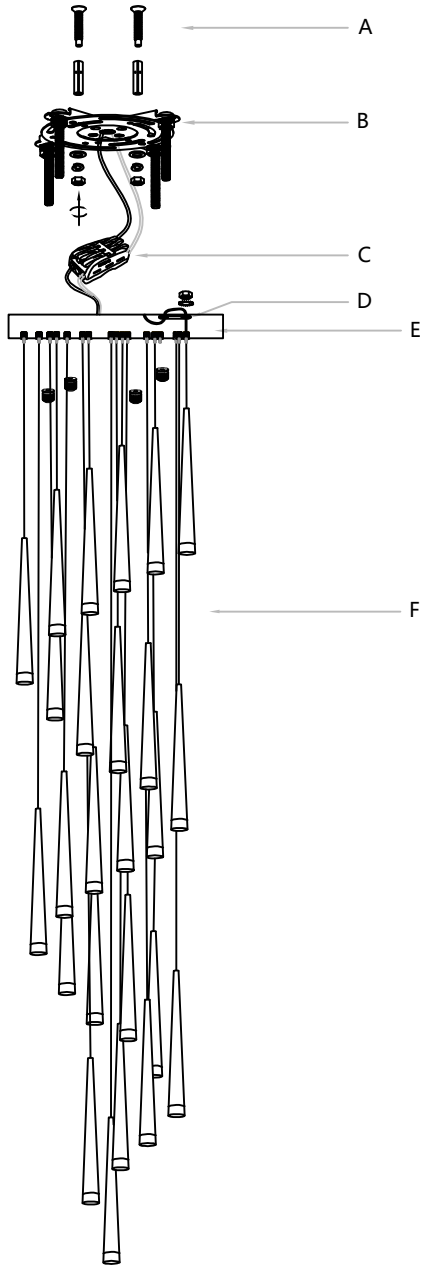

First, install the lamp head suspension wire (**F**) from the inside out onto the top cover (**E**). Then, use the eight-peg fastener (**D**) to secure the suspension wire and tighten the screws. Next, fix the mounting plate (**A**) to the ceiling, and connect the wires of the top cover (**E**) to the wires on the ceiling and the terminal plate (**B**). Then, align the holes on the top cover (**E**) with the holes on the mounting plate (**A**), and tighten the screws.

Installation Instructions

WOMO lighting

Model number: WM2204-16


Warning:
This product must be installed by personnel who are familiar with its structure and related hazards, in accordance with the installation specifications.
This product is suitable for indoor installation.



Product style diagram


Steps of installation

1

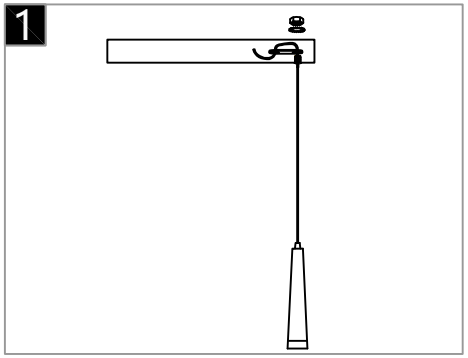


Separate the hanging wires on the lamp head by their lengths, install them from the bottom to the top cover, and then pass the hanging wires through the eight-leaf buckle and secure them on the top cover.

2

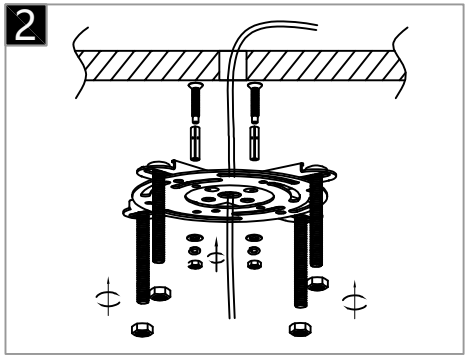


First, fix the expansion screws onto the ceiling, and then lock the mounting plate onto the screws.

3

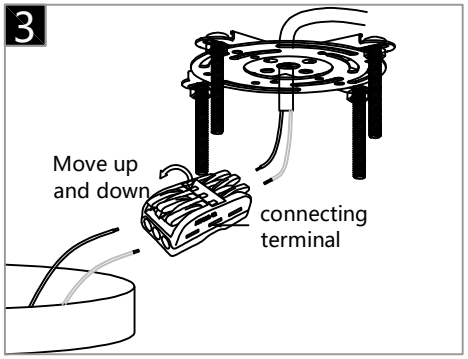


Connect the wires inside the luminaire and ceiling to the terminal, usually neutral wire (white), hot wire (black)


4

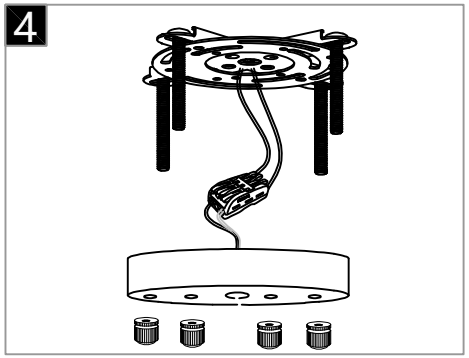

Align the top cover hole position on the luminaire with the screws on the mounting plate and then secure from the bottom using the nut.

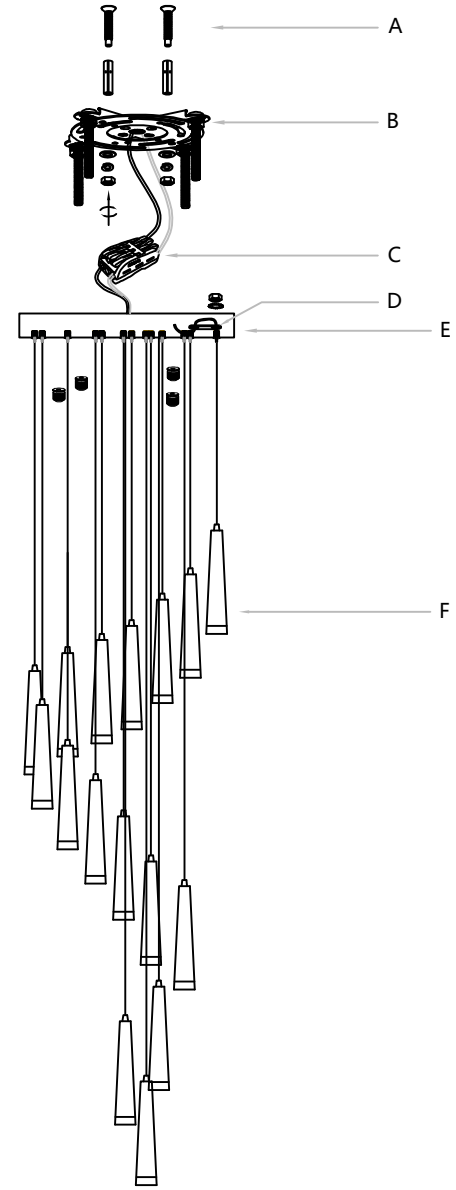

Lampshade suspension wire installation diagram: The shortest one is 1, and the longest one is 16. During installation, start from No. 1 and install them in sequence at intervals.

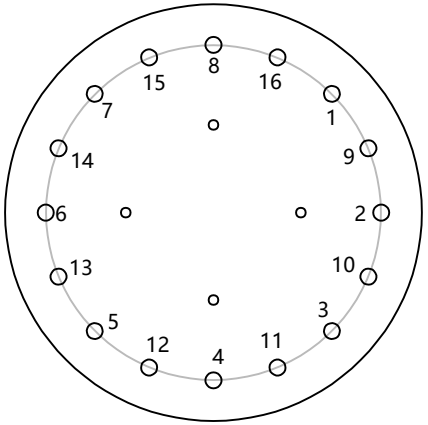

First, install the lamp head suspension wire (**F**) from the inside out onto the top cover (**E**). Then, use the eight-peg fastener (**D**) to secure the suspension wire and tighten the screws. Next, fix the mounting plate (**A**) to the ceiling, and connect the wires of the top cover (**E**) to the wires on the ceiling and the terminal plate (**B**). Then, align the holes on the top cover (**E**) with the holes on the mounting plate (**A**), and tighten the screws.